Toyota Essential Care Service Content





| | JIIVEI | Gold |
|---|----------|----------|
| Check all pedal(s) and component(s) | √ | ✓ |
| Check and adjust tyre pressures | √ | ✓ |
| Check belts | √ | ✓ |
| Check exterior lights | √ | ✓ |
| Check horn | √ | ✓ |
| Check interior lights | √ | ✓ |
| Check levels and refill as required | √ | ✓ |
| Check radiator and condense | √ | ✓ |
| Check seat belts | √ | ✓ |
| Check steering wheel | √ | ✓ |
| Check warning lights | ✓ | ✓ |
| Check washers | √ | ✓ |
| Check wipers | √ | ✓ |
| Drain engine oil | √ | √ |
| Free Hybrid Health Check (model dependant) | √ | ✓ |
| Free Visual Safety Report | √ | ✓ |
| Free Wash and Vac | <u> </u> | √ |
| Inspect air conditioning filter- replace as necessary* | | √ |
| Inspect brake pads and discs | √ √ | √ |
| Inspect steering | | √ |
| Inspect suspension | <u> </u> | · · |
| Inspect tyres | | ✓ |
| Inspect tyres Inspect wheels | | ∀ |
| Recheck all levels | | ∀ |
| | | ∀ |
| Recheck for fluid leaks - underside and engine bay | | ∀ |
| Refill engine oil | ✓ | ∀ |
| Replace oil filter | | |
| Reset service lights or monitor as required | | √ |
| Torque tighten wheel nuts | ✓ | √ |
| Change brake fluid (every two years) | | √ |
| Check alarms | | √ |
| Check and adjust gear cables | | √ |
| Check and inspect suspension ball free play | | √ |
| Check battery | | √ |
| Check clutch fluid as required* | | √ |
| Check fuel cap & lines | | √ |
| Check transmission oil* | | √ |
| Full 4-wheel alignment check- extra charge for adjustment* | | √ |
| Inspect brake lining and drums | | √ |
| Inspect charcoal canister (model dependant)* | | √ |
| Inspect drive shaft boots | | √ |
| Inspect exhaust pipes | | √ |
| Inspect front and rear differential oils (model dependant)* | | ✓ |
| Inspect fuel and brake pipes | | ✓ |
| Inspect glass and light lenses | | ✓ |
| Inspect hand brake | | ✓ |
| Inspect spark plugs | | ✓ |
| Inspect suspension ball joints and dust covers | | ✓ |
| Inspect transfer box oil (model dependant)* | | ✓ |
| Inspect wheel bearing | | ✓ |
| Lubricate prop shaft joints (model dependant) | | ✓ |
| Replace air filter (model dependant) | | ✓ |
| Replace battery in locking remote | | ✓ |
| Tighten prop shaft bolts (model dependant) | | ✓ |
| | | |

^{*}Additional charges apply if work is required